

RONBOW<sup>®</sup>

Model: 033615 Contempo Collection

**Note: DO NOT USE** any adhesives with silicone. Silicone will bond to the decorative finish and cause permanent damage

**Step 1:** Position and drill a 1-3/4" hole for the drain on the countertop



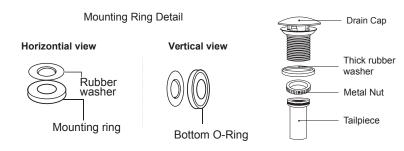

## Step 3: Drain assembly picture

Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop

(There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead)

**Step 4 :** From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty

Step 5: Attach p-trap to tailpiece

**Step 6 :** Secure top to cabinet by using adhesive caulk

